

Carry out replacement in the following order:

1

Place wedge blocks under the front wheels.

2

Loosen the wheel mounting bolts.

3

Raise the rear of the car and secure on supports.

4

Remove the rear wheels.

5.1



Loosen and remove the hub nut.

5.2



6.1




Unscrew the brake caliper fastening

6.2



6.3

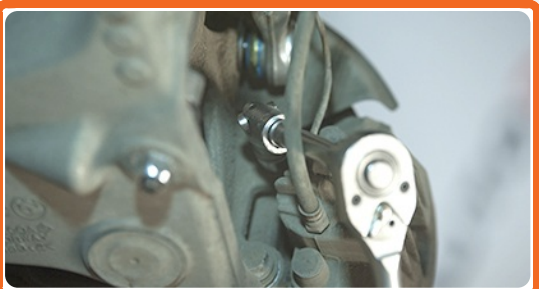

7.1



Remove the brake caliper.

7.2



i



Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.

8.1



Unscrew the brake disc mounting bolts and remove it.

8.2



9.1



Using a puller, remove the wheel hub from the bearing.

9.2



9.3




10.1




Pull the bearing inner race out of the wheel hub.

10.2

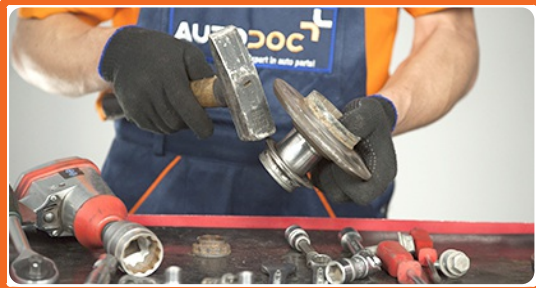

10.3

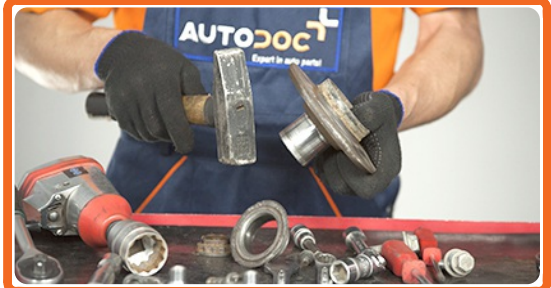

11.1



Unscrew the lower arm fastening.

11.2



11.3




11.4



11.5



12.1

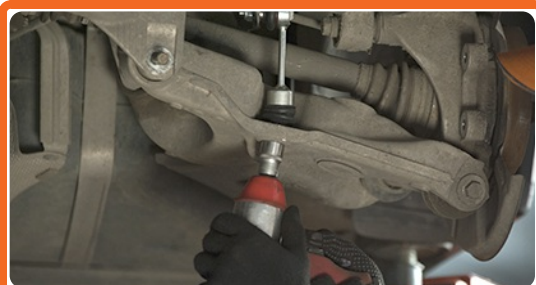


Unscrew the lower fastener of the stabilizer rod/link

12.2




13.1

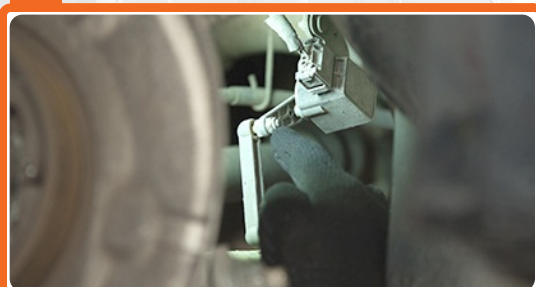

Disconnect the headlight leveling sensor rod.

13.2

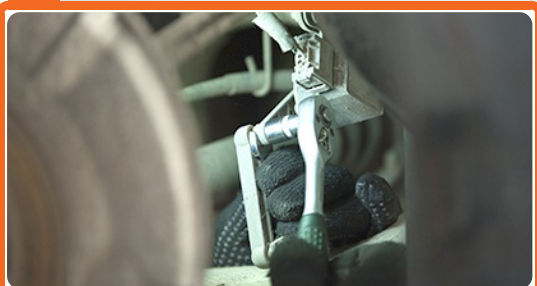

13.3



14.1



Remove the arm from the subframe eyelets.

14.2



15.1



Unscrew the fastening bolts of the drive shaft from the reduction gear.

15.2




16.1




Remove the drive shaft.

16.2

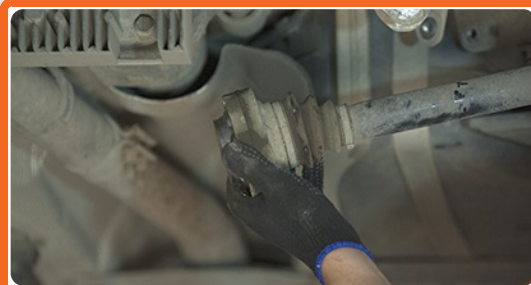

17.1

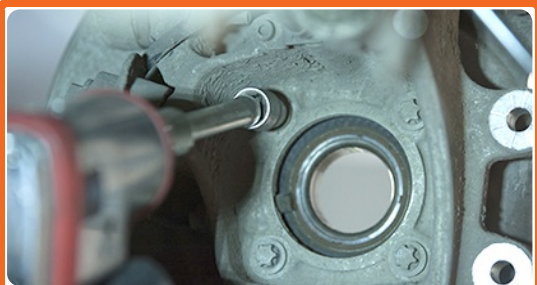

Unscrew the fastening bolts of the rear wheel hub bearing.

17.2



17.3



18.1



Remove the hub bearing mounting.

18.2



19.1



Press the wheel hub into the bearing inner race.


19.2



19.3



20.1

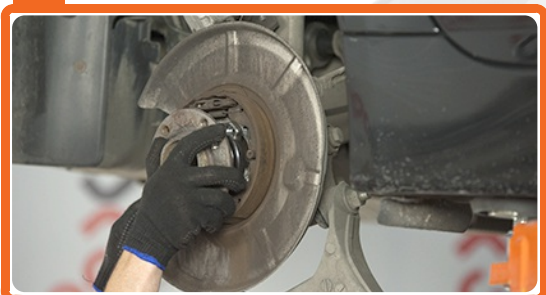

Install the wheel hub on the steering knuckle.

20.2



21.1



Tighten the fastening bolts of the rear wheel hub bearing.

21.2



21.3



22.1




Install the drive shaft.

22.2



22.3

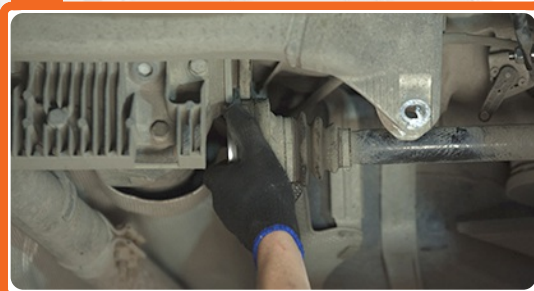

23.1




Tighten the bolts that fasten the drive shaft to the reduction gear.

23.2



24.1

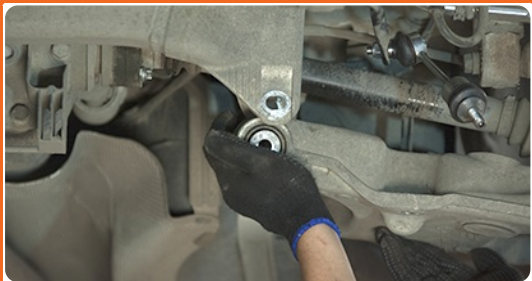

Slide the arm to the subframe eyelets.

24.2



24.3



25.1



Tighten the lower fastener of the stabilizer rod/link

25.2



26



Support the rear arm.

27.1



Tighten the arm fastening.

27.2



27.3



28.1



Connect the headlight leveling sensor rod.

28.2



29.1




Install the brake disc and secure it.

29.2



30.1

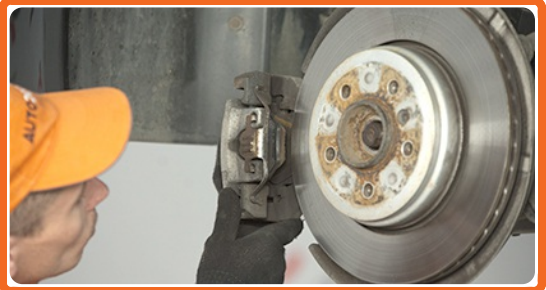

Install the brake caliper and fix it.

30.2



30.3



31.1



Tighten the wheel hub nut.

31.2



32.1



Lock the nut.

32.2



33

Install the wheel.

34

Lower the car and working in a cross order, tighten the wheel bolts.



We hope that this information have been useful for you!

[Video tutorials](#)

Watch our detailed video guides about your BMW 5 E60 repair on our youtube channel. Watch video guides.

[AutoDoc online](#)

Highest quality wheel/hub bearing kits for your car BMW 5 E60 are available on AutoDoc. Go to the website.

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

QUALITY AUTO PARTS



BMW



WHEEL/HUB BEARING KITS



BMW 5 E60



WHEEL/HUB BEARING KITS FOR BMW



WHEEL/HUB BEARING KITS FOR BMW 5 E60



i Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement works. AutoDoc shall not be liable for any loss, injury, damage of property, acquired in the repair or replacement process due to incorrect usage or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for informative purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

AUTODOC IN SOCIAL MEDIA

